

QRS Music Technologies, Inc.



PNOscan II



Installation Manual

Item # 79217C

Manual # IM792171

Rev. 1.01

Manual Rev. 1.17

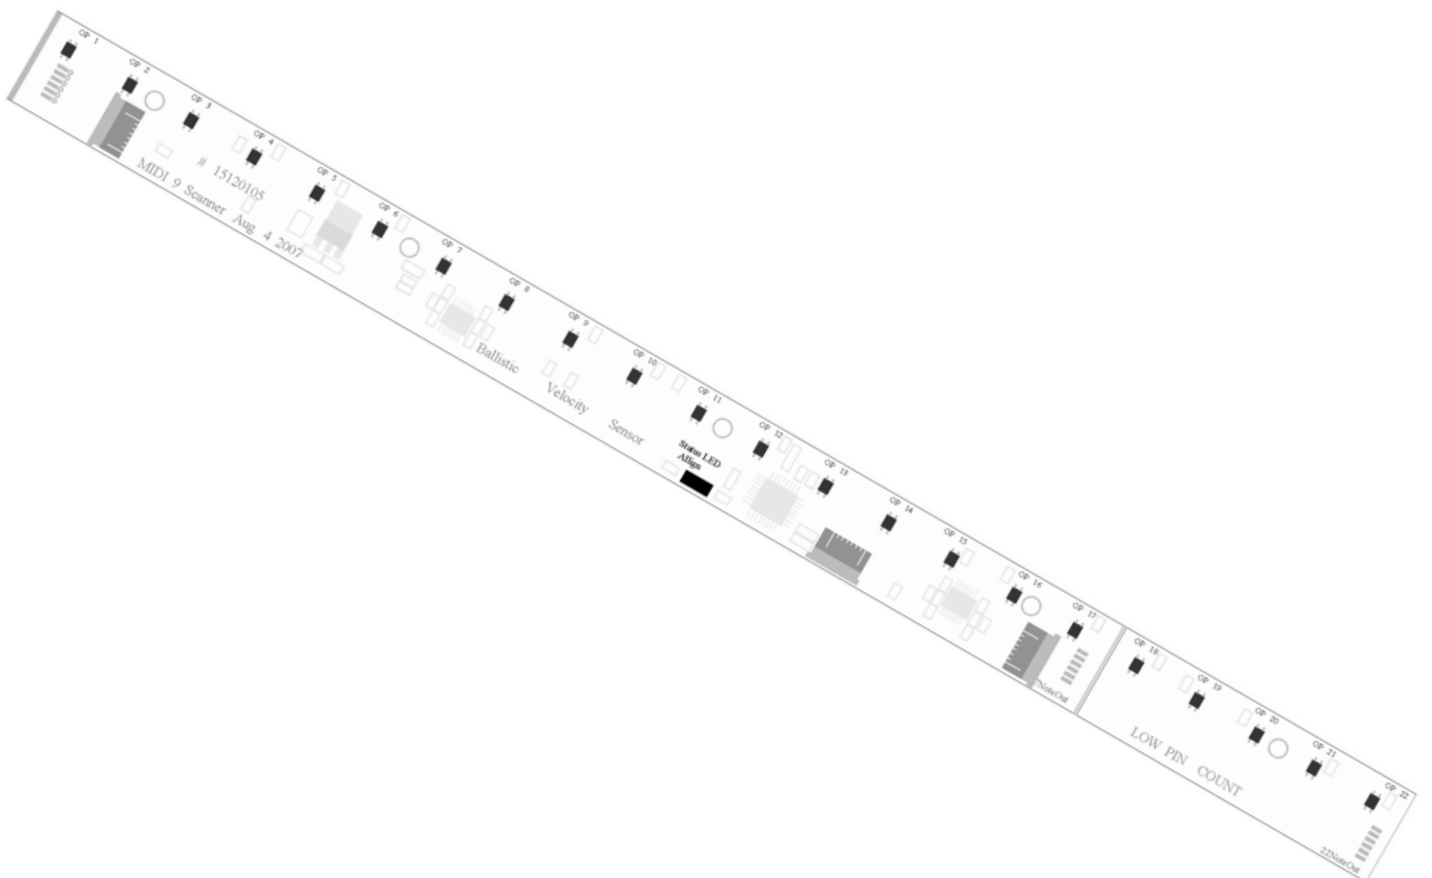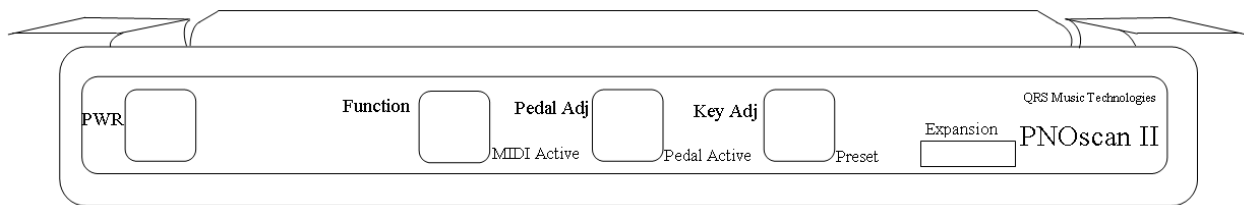

Precautions!

If this is your first PNOscan II installation it is highly recommended that you read through the manual before beginning the installation.

If this PNOscan II system will only be used with a computer you will NOT need a power adapter. Power to the system is supplied by the computer. You WILL need a cable to connect PNOscan II to the computer. See the Accessories list on page 3.

If you're installing this kit into an upright piano, check that you have upright conversion parts. Look for the * (QTY column) in the parts list on page 6.

It's very important that the bottoms of the keys are light in color with no paint stains. And, that the sides of the keys, in the area of the sensors, are colored black. See "Preparing the Keys", on page 16.

The installation is NOT complete, and the system will not work correctly, until the Keyboard and Pedal Setup procedures are performed. See page 21 for details.

If installing a Version 45 TUSB for use with the QRS Sound Module...

DO NOT CONNECT A POWER ADAPTER TO THE POWER INPUT OF THE TUSB. Power to the TUSB is supplied by the QRS Sound Module via the Serial I/O port. See page 25.

Warnings

FCC INFORMATION

1.IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!

This product, when installed as indicated in the Installation Manual, meets FCC, CE, Chinese CE and Australia CE requirements. Modifications not expressly approved by QRS Music Technologies, Inc. may void your authority, granted by the FCC, to use this product.

2.IMPORTANT: When connecting this product to accessories and/or another product use only high quality shielded cables. Cables supplied with this product MUST be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the United States of America.

3.NOTE: This product has been designed to comply with the requirements listed in the FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices. This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the Installation Manual, may cause interference harmful to the operation of other electronic devices. Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

- Relocate either this product or the device that is being affected by the interference.
- Utilize power outlets that are on different circuits (circuit breaker or fuse) or install AC line filters.

If these corrective measures do not produce satisfactory results, please contact the local authorized distributor, or contact QRS Music Technologies, Inc. 269 Quaker Drive Seneca, PA 16346.

Table Of Contents

Precautions!	2
Welcome	4
Brief Description	
Tools And Materials List	5
Parts List	6
Parts Description	7
Installation Procedures	
A] Preparation	8
B] Locating the Front to Back Position of the Optical Key Scan Sensors	
C] Key Scan - Track and Circuit Board Assembly	9
Locking Verses Non-Locking Cable Connectors	
D] Connecting the Four Key Scan Circuit Boards	10
E] Establishing the Bass/Treble Position of the Key Scan Circuit Boards - Function Test	11-13
F] Locating and Securing the Proper Position of the Key Scan Assembly	14
G] Setting the proper Key Scan Assembly Height	15
H] Dressing the Key Scan Assembly Cables	16
I] Preparing the Keys	16
J] Soft Pedal Circuit Board Installation [Grand & Upright]	17
K] Mounting the TUSB Interface	18
L] Sustain Pedal Circuit Board Installation [Grand & Upright]	19
M] Final Assembly	20
Keyboard Setup (Calibration)	21
Pedal Setup	
Component Placement [Grand & Upright]	22
Operating Modes / Standard Version and Version 45 (Used with QRS Sound Module)	23
TUSB Interface Rear Panel Connections	24
TUSB Interface Front Panel	25
Connection Diagrams [Grand & Upright]	26
Troubleshooting	27
Warranty	28-29

Accessories

QRS Part #	Description	Purpose
Unless your using a QRS Ancho or Petine controller with PNOscan II, one of these two cables is <u>required</u> to use PNOscan.		
50126	USB A Male - 5 Pin Mini B	Connects PNOscan II to a computers' USB port
70153	20' MIDI Cable [10' = 70152]	Connects PNOscan II MIDI Out to a MIDI device
79208	Sostenuto - A Sost Pedal Circuit board can be ordered and connected to the "Sost" connector on the Soft Pedal Sensor board to monitor the Sostenuto pedal on the piano. Order: 1-79208; 1-7921734; 1-1790185; 1-7921736; 1-7921770; 2-70585	

Upright Conversion Kit

QRS Part #	Description
79217UC	Parts added to this kit for installation into an Upright piano.

Welcome

**Will you be connecting this PNOscan II record system to a QRS Petine controller?
If so, you will need a MIDI Adapter Cable, #99140, and set the jumper on the Petine!**

Please read through these installation instructions prior to attempting the installation. Taking the time to understand this product before starting and exercising care during the installation will promote immediate success.

On which keyboard instruments can I install a PNOscan II sensor strip? The PNOscan II was designed in such a manner that it can be installed in virtually any piano. For most acoustic pianos the installation process is straightforward. Occasionally with pianos, and more frequently with organs and other keyboards, a successful installation will require some creativity on the installer's part.

Acoustic pianos: There must be enough room between the bottom of the key and the highest portion of the key frame so that the key does not hit the sensor housing. Fortunately, for most acoustic pianos this is not a problem. More than likely you will have to shim the sensor strip higher.


Please unpack your kit and report any damage or missing parts immediately. See page 6 for the complete parts list.

Brief Description

Key Scan Assembly: The key scan assembly consists of a series of optical sensors, one for each key. Each optical sensor has one small plastic "tower." The tower transmits and receives a beam of infrared light. As the key moves it gradually changes the intensity of the amount of light detected. The assembly is mounted to the key frame, positioned so that the bottom of each key reliably reflects the light. Since it is optical, absolutely nothing effects the touch of the key. The travel of the key is not restricted by the assembly - each key still has the same range of motion it had before. The Key Scan Assembly consists of four printed circuit boards inserted in a metal track.



Pedal Sensors: Although PNOscan II was designed to detect the movement of all three pedals, only two Pedal Sensors are supplied with the PNOscan II system. The smaller "Sustain" Pedal Board is used to detect motion of damper tray on a Grand, or the Pedal Lever on an Upright, when the sustain pedal is depressed. The larger "Soft" Pedal Board detects movement of the key frame on a Grand, or the Hammer Rail on an Upright, when the soft shift pedal is depressed.

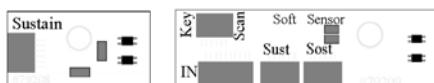

TUSB Interface: The TUSB Interface is the control center for the system. Used to setup, or calibrate, the sensors after the installation. Lights indicate activity and buttons are used to change operating modes. The interface transmits MIDI data, allowing the user to connect to external synthesizers and sequencers.



Tools and Materials List

Below is a list of recommended tools and materials you should have on hand prior to the installation. Keep in mind that piano design and construction differs widely amount brands and models. Having access to a general supply of wood stock, glues and other materials can save you time and generally make the install go smoothly and easily.

Tools

Cordless drill and screw bits
Drill bits
Phillips screw drivers: #1 and #2
Large flat blade screwdriver
Fine needle nose pliers
Razor knife with new blades
Sharp wood chisel
Good blunt nose tweezers
6" rule calibrated in 1/32"
Small combo square
Sharp pencils
4' straight edge
Feeler gauges (Could use old credit cards)
Computer with sound card or MIDI sound module

Materials

1/4" and 1/2" plywood, small pieces
Double sided tape
Masking Tape
Black latex paint or extra large permanent black marker
Wood glue
Shim stock assortment (non-compressing)
Gaffers tape or duct tape
Jumbo Size Black Magic Marker

Additional Tools

Although these tools are not normally required you may work on a piano with unique requirements.


Jig saw with medium tooth blade
6 or 8 oz ball peen hammer
Center punch
1" paddle drill bit
6' tape rule

Parts List


	QTY	PART #	DESCRIPTION
<input type="checkbox"/>	4	79205	KEY SCAN CIRCUIT BOARD
<input type="checkbox"/>	3	79228	ALUMINUM KEY SCAN TRACK - PINNED [PINS=7921726]
<input type="checkbox"/>	1	79228	ALUMINUM KEY SCAN TRACK - NON-PINNED
<input type="checkbox"/>	5	7921756	KEY SCAN TRACK MOUNT [10 - #4-40X1/8" PANHEAD SCREW] [10 - #4X3/4" PANHEAD SCREW]
<input type="checkbox"/>	20	7921768	SHIM - THICK [USE WITH KEY SCAN TRACK MOUNTS]
<input type="checkbox"/>	40	7921758	SHIM - THIN [USE WITH KEY SCAN TRACK MOUNTS]
<input type="checkbox"/>	1	79210	TUSB INTERFACE [2 - #6X1/2" PANHEAD SCREW] [STANDARD VERSION OR VERSION 45-QRS SOUND MODULE]
<input type="checkbox"/>	1	7921701	AC/DC POWER ADAPTER INPUT: 100-240V 50-60Hz 9.2A OUTPUT: 5VDC 1.0A CENTER +
<input type="checkbox"/>	1	79209	SOFT PEDAL CIRCUIT BOARD [1 - #4X3/16" PANHEAD SCREW]
<input type="checkbox"/>	1	7921732	SOFT PEDAL CHASSIS [1 - #4X3/16" PANHEAD SCREW]
<input type="checkbox"/>	1	79208	SUSTAIN PEDAL CIRCUIT BOARD [1 - #4X3/16" PANHEAD SCREW]
<input type="checkbox"/>	1	7921734	SUSTAIN PEDAL CHASSIS [2 - #4X3/16" PANHEAD SCREW]
<input type="checkbox"/>	1	7921770	"L" BRACKET: SUSTAIN PEDAL MOUNTING [*ADDITIONAL FOR UPRIGHT INSTALLATION: SOFT PEDAL REFLECTOR]
<input type="checkbox"/>	1	7921706	CABLE: 38" 10-PIN FLEX [TSUB-SOFT PEDAL]
<input type="checkbox"/>	(1*)	790185	CABLE 60" 6-PIN FLEX [*REQUIRED FOR UPRIGHT PIANO INSTALLATIONS ONLY]
<input type="checkbox"/>	1	7921718	CABLE: 20" 6-PIN FLEX [SOFT PEDAL/SUSTAIN PEDAL]
<input type="checkbox"/>	2 (*)	7921704	CABLE: 12 " 6-PIN [KEY SENSOR/SOFT PEDAL] [*ONLY 1 REQUIRED FOR UPRIGHT PIANO INSTALLATIONS]
<input type="checkbox"/>	3	7921703	CABLE: 4.5" 6-PIN WAVED FLEX [KEY SENSOR/KEY SENSOR]
<input type="checkbox"/>	2	79206	FLEX CABLE COUPLER
<input type="checkbox"/>	1	7921754	CABLE: 1 METER [USB MINI B EXTENDER]
<input type="checkbox"/>	2	7921736	SENSOR TAB [OPTICAL SENSOR REFLECTOR FOR SUSTAIN AND SOFT SHIFT]
<input type="checkbox"/>	10	70208	CLAMPS "WAVE" [10 - #6X1/2" PANHEAD SCREW]
<input type="checkbox"/>	7	7921764	1" SQUARE OF SILVER TAPE (SECURES KEY SENSOR BOARDS TO METAL KEY-SCAN TRACKS)
<input type="checkbox"/>	15(2*)	70585	SCREW - 6X1/2" [PARTICLE BOARD] [2-TUSB; 1- "L" BRACKET; 10-WAVE CLAMPS] [* ADD 2 FOR UPRIGHT]
<input type="checkbox"/>	10	7921760	SCREW - 4X3/4" [PHILLIPS - TRUSS] [ATTACHES KEY SCAN TRACK MOUNTS TO KEY FRAME]
<input type="checkbox"/>	5	7921744	SCREW - 4-24X3/16" [SUSTAIN & SOFT PEDAL]
<input type="checkbox"/>	10	7921742	SCREW - 4-40X1/8" [ATTACHES METAL KEY SCAN TRACK TO THE TRACK MOUNTS]
<input type="checkbox"/>	(1*)	70581	"L" BRACKET: SOFT PEDAL SENSOR TAB MOUNT [*UPRIGHT PIANO INSTALLATION]
<input type="checkbox"/>	1	IM792171	INSTALLATION GUIDE
<input type="checkbox"/>	1	OM79217	USER GUIDE
<input type="checkbox"/>	1	7921766	PNOSCAN WARRANTY CARD
		79217UC	UPRIGHT CONVERSION KIT [1-790185; 1-70581 & 2-70585]

Parts Description

KEY SCAN CIRCUIT BOARD

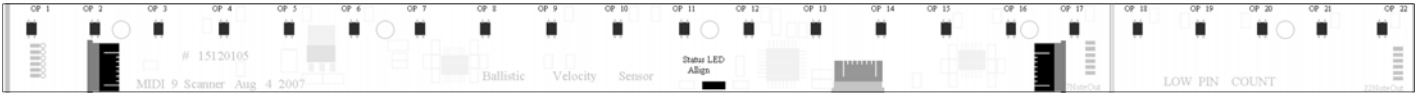

METAL KEY SCAN TRACK - PINNED

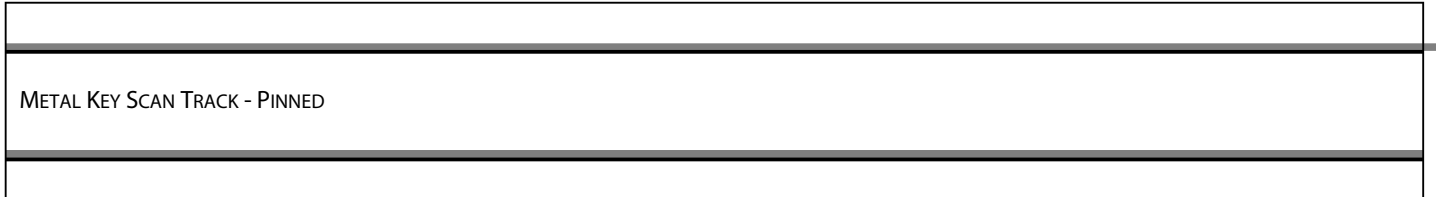


KEY SCAN TRACK MOUNT

Thick

MULTI SHIM PACK - USE WITH TRACK MOUNTS



Thin

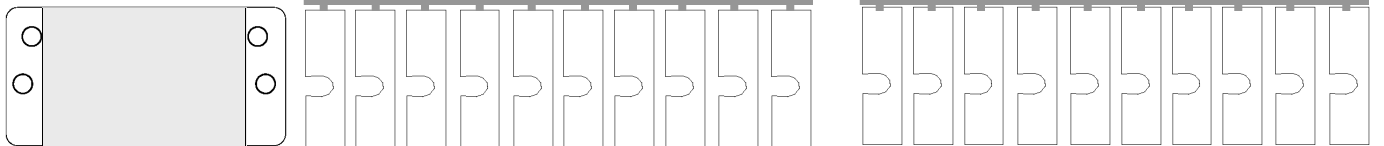



TUSB INTERFACE

FRONT

REAR

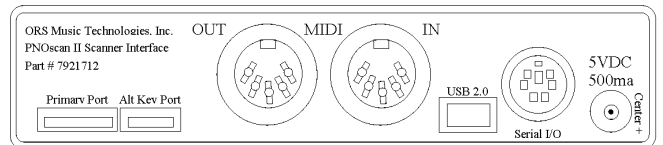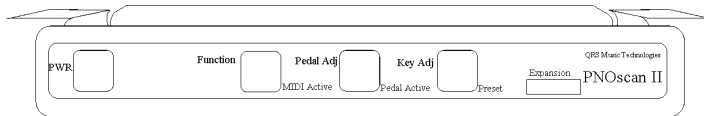



SOFT PEDAL CIRCUIT BOARD AND CHASSIS

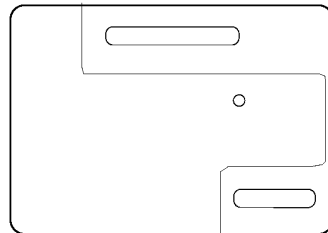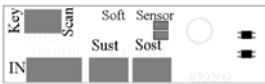

AC POWER ADAPTER



SUSTAIN PEDAL CIRCUIT BOARD AND CHASSIS

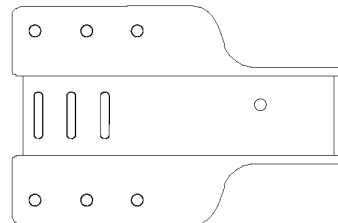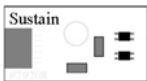

SENSOR TAB
"REFLECTOR"



SILVER TAPE



6-PIN WAVED FLEX CABLE [4.5"]



6-PIN FLEX CABLE [12" & 20"] [60" FOR UPRIGHT INSTALLATIONS]



MISC PARTS BAG

SCREWS
"L" BRACKET
Wave Clamps

FLEX CABLE COUPLER



10-PIN FLEX CABLE [38"]




Installation Procedures

A] Preparation

1. Check the parts in your PNOscan II kit against the parts list before beginning this installation.
2. Check the recommended tool list to be sure your equipped for the installation.
3. Grand - Remove the fall board, left and right key blocks and the key slip.
Upright - Remove the upper and lower panels.
4. Grand - Remove the key action from the piano case.
5. **Note: Be certain to paint the keys before replacing them in the piano. See Figure 21 on page 16.**


B] Locating the Front to Back Position of the Optical Key Scan Sensors

1. Set a straight edge against the back of the sharp keys and measure approximately **3/16"** from the straight edge toward the front end of the sharp keys. See *Figure 1*.
 2. Use a pencil to mark the side of key #88.
 3. Transfer the marks down to the key frame as well.
 4. Repeat steps 1-3 for key #1 at the bass end of the key frame.
- These marks will later be used to align the Optical Key Scan sensors which will establish the front to back location of the key scan assembly on the key frame.

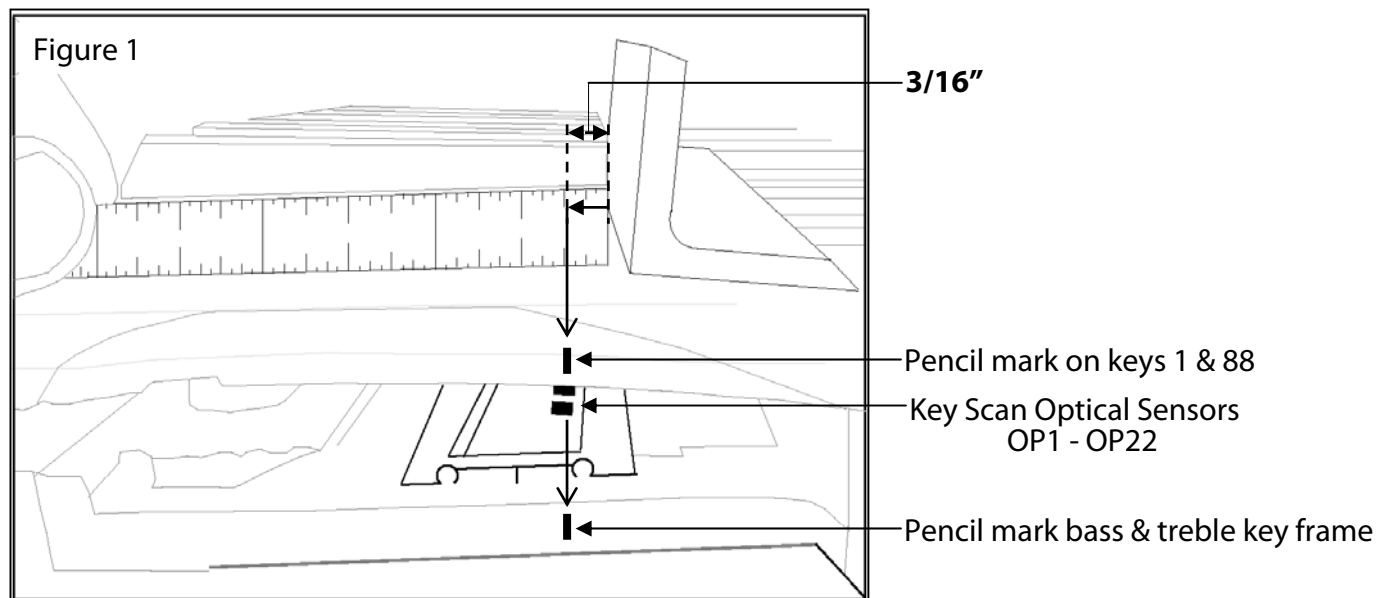

C] Key Scan - Track and Circuit Board Assembly

1. Assemble the four Aluminum Key Scan Track sections. *See Figure 2.*
 - Notice that one joint pin protrudes slightly further than the other allowing for easy of alignment into the joining sections. Slide all sections firmly together.
 2. Add a strip of the silver-metal tape across each joint, on the underside of the aluminum tracks, to hold the sections together.
 3. There are 3 cable connectors on each of the Key Scan Circuit Boards. Slide the boards into the tracks so that the connector closest to the end of the circuit board faces left (bass end). This puts the Optical Sensors towards the rear of the piano. *These sensors will be aligned with the marks you made on the action frame and on keys #1 and #88. See Figure 1.* The remaining 3 circuit boards need to be placed with the same orientation. *See Figure 3.*
 - There are four pieces of fiber tape attached to the bottom of the boards. This tape will insure a snug fit into the tracks so the boards won't slide out of position easily. The tape also helps to eliminate noise between the boards and the track due to vibration.
- ⇒ **Hold the boards close to the metal track so the boards don't bend and break as you insert them.**

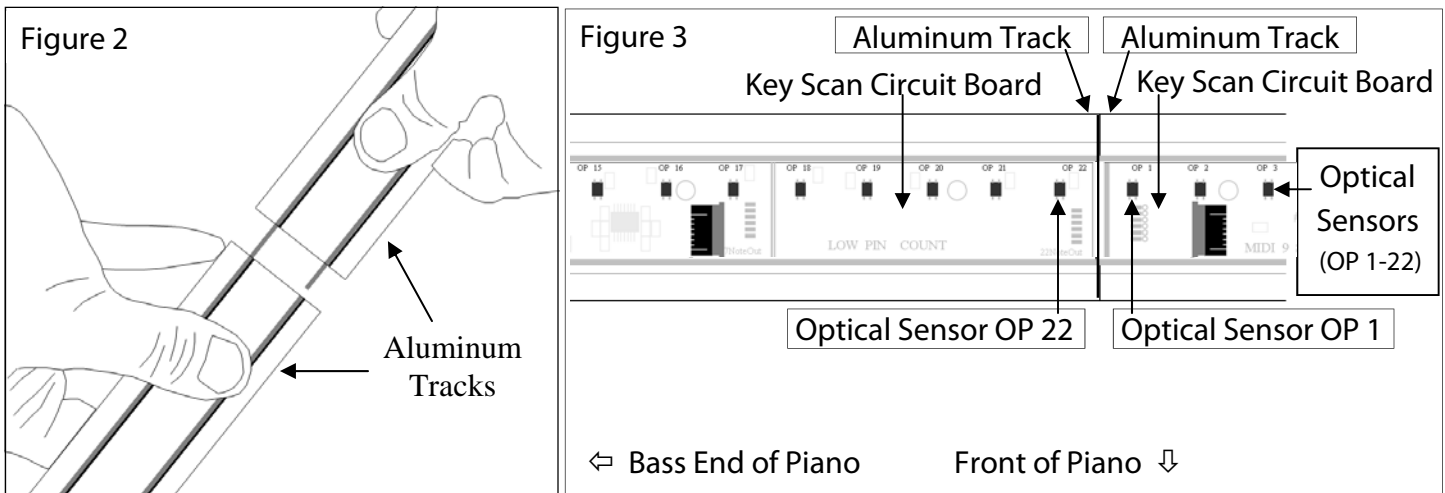


⇒ Locking Verses Non-Locking Cable Connectors

You will see the two types of connectors on the circuit boards; Locking and Non-Locking.

- Locking: *Figure 4A.* Used on type 1 key scan boards. The lock must be fully pulled out prior to inserting the cable. Once the cable is inserted the lock must be fully pushed in toward the connector.


NOTE: Use care not to force the connector latches when unlocking or locking them as it is possible to break them.

- Non-lock: *Figure 4B.* Only requires full insertion of cable.

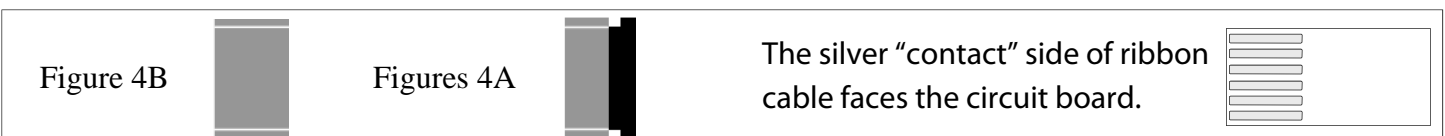


D] Connecting the Four Key Scan Circuit Boards

1. Orient the Key Scan Assembly so that the Key Scan Circuit Boards are oriented as shown in *Figure 5*.

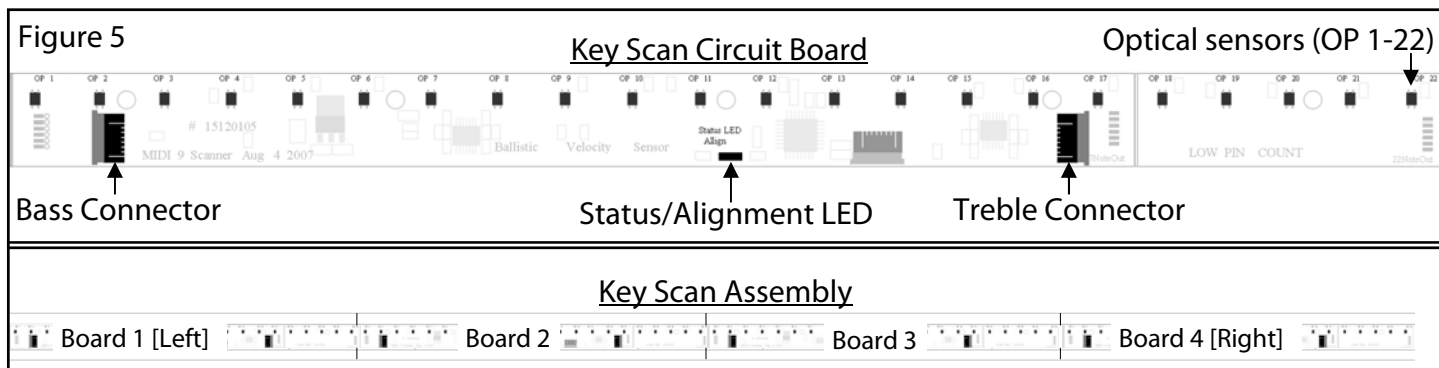


2. Plug one end of a 4.5" 6-Pin Waved Flex Cable into the Treble Connector of Board 1. See *Figure 6*.

- Insert one end of the cable into a connector and then gently pull the cable to the length needed to meet the other connector. When stretching the cable, support the connected end to keep it from pulling out. Pull the cable from the opposite end, not from the middle of the cable, to avoid distorting the cable. Close the lock if present.

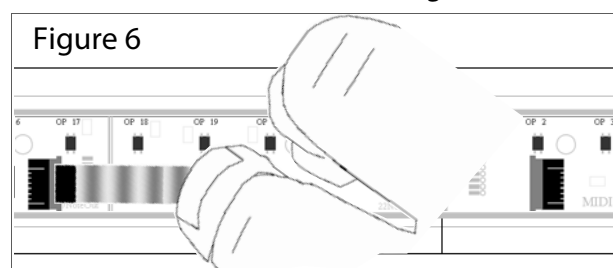


3. Plug the other end of the cable into the Bass Connector of Board 2. See *Figure 7*.

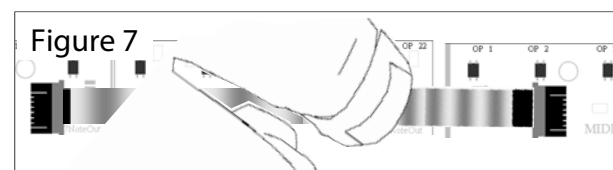

- Use the two remaining Waved Flex Cables to connect the other Key Scan Circuit Boards.
- 4. Treble Connector of Board 2 to the Bass Connector of Board 3
- 5. Treble Connector of Board 3 to the Bass Connector of Board 4
- Typically, there will be humps in these wave cables after the connections are made and they may interfere with the keys and cause mechanical noise when keys are depressed. If the humps interfere with your installation jump to section "H" on page 16 to review how to flatten them correctly.

6. Plug one of a 12" 6-Pin Flex Cables into the Treble Connector of Key Scan Board 4. See *Figure 8*.

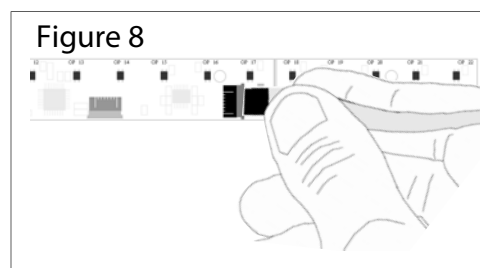


- The Key Scan Assembly should look like *Figure 9*. The Bass Connector of Board 1 is not used.




E] Establishing the Bass/Treble Position of the Key Scan Circuit Boards - Function Test...

- You will now establish the proper spacing of the Key Scan Boards for your particular piano. The process we will use to establish this Left/Right alignment will also include an initial bench type functional test which verifies proper system function, as it is ideal to test the components prior to installation.

- Grand - Remove the action stack from the key frame.
- Do not remove the keys.
- Lay the Key Scan Assembly across the width of the keys and up against the backs of the sharp keys. *See Figure 10.*
- Position the metal Key Scan Track Assembly so that there is an equal amount of over-hang, or under-hang, at the bass and treble ends of the keyboard. Slide the assembly against the sharp keys and use a few pieces of masking tape to temporarily hold the assembly to the keyboard during the circuit board alignment.

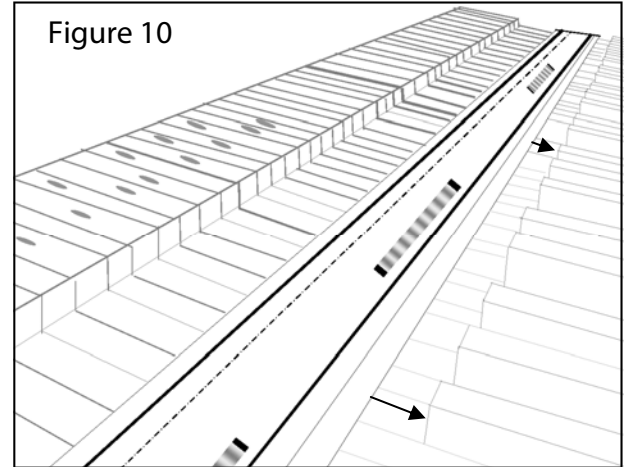


- Connect the components. The reason for making these connections at this time is two fold. First it allows the system to be verified functionally. In the event there was shipping damage, or some other issue, it's best to detect problems now instead of after the system is secured in place. Secondly, there is a green LED light on each of the 22 note key scan boards. These LEDs are easily visible when the system is powered on and they will aid you in the mechanical alignment of the key scan boards to the keys.
- Connect the 6-Pin Flex cable coming from the Treble Connector of Key Scan board 4 (Step D-6 Figure 8) to the Key Scan socket of the Soft Pedal Circuit Board. *See Figure 11.*
 - Connect the 10-Pin Flex Cable to the Primary Port of the TUSB interface and to the IN socket of the Soft Pedal Circuit board.
 - Power ON the QRS Sound Module (comes with 9V adapter) and connect it to the Serial I/O port **OR** connect the 5V AC Power Adaptor to the 5VDC socket of the TUSB interface. **DO NOT CONNECT BOTH!**
- When the AC adaptor or the QRS Sound Module is plugged into an AC outlet, the PNOscan II system should power on. You will notice various lights blinking.

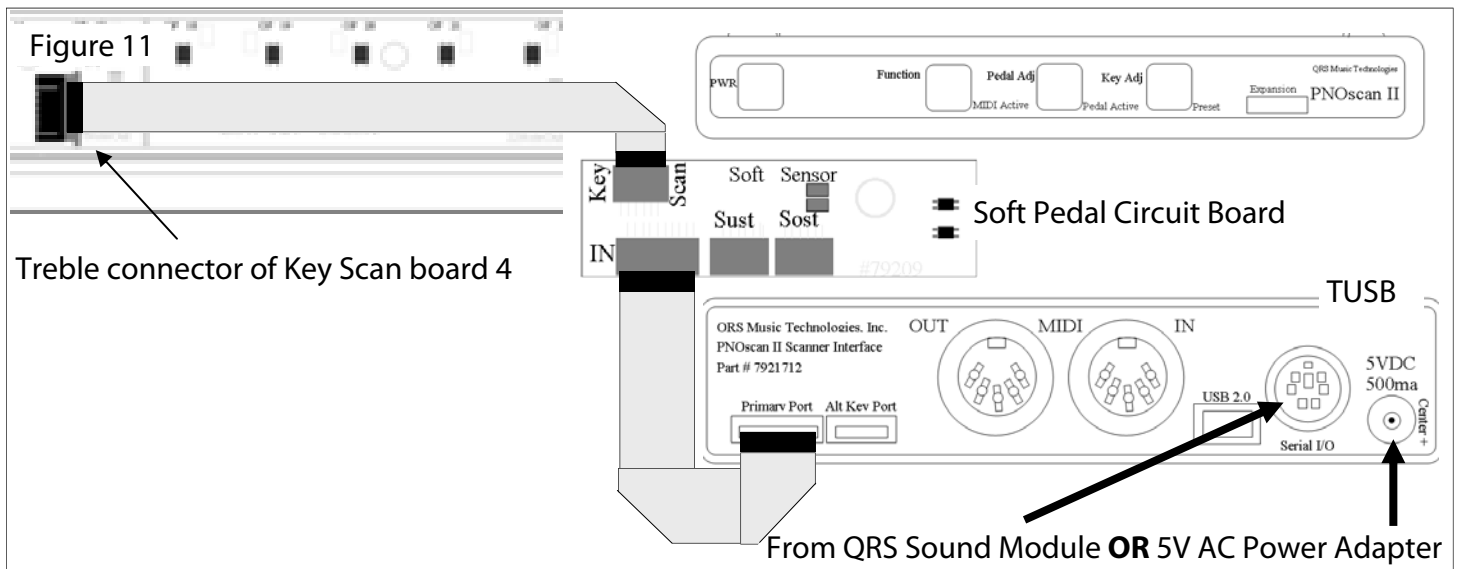

E]... Establishing the Bass/Treble Position of the Key Scan Circuit Boards - Function Test ...

7. As a test, place your finger over and in close proximity to the individual Optical "OP" sensors on the key scan boards. As the sensors are activated you will see a corresponding flicker of the lighted FUNCTION button on the TUSB as well as the green "Status LED-Align" LEDs on the key scan boards. See *Figure 12*
- If the system does not respond as described above check your connections and your AC power source.

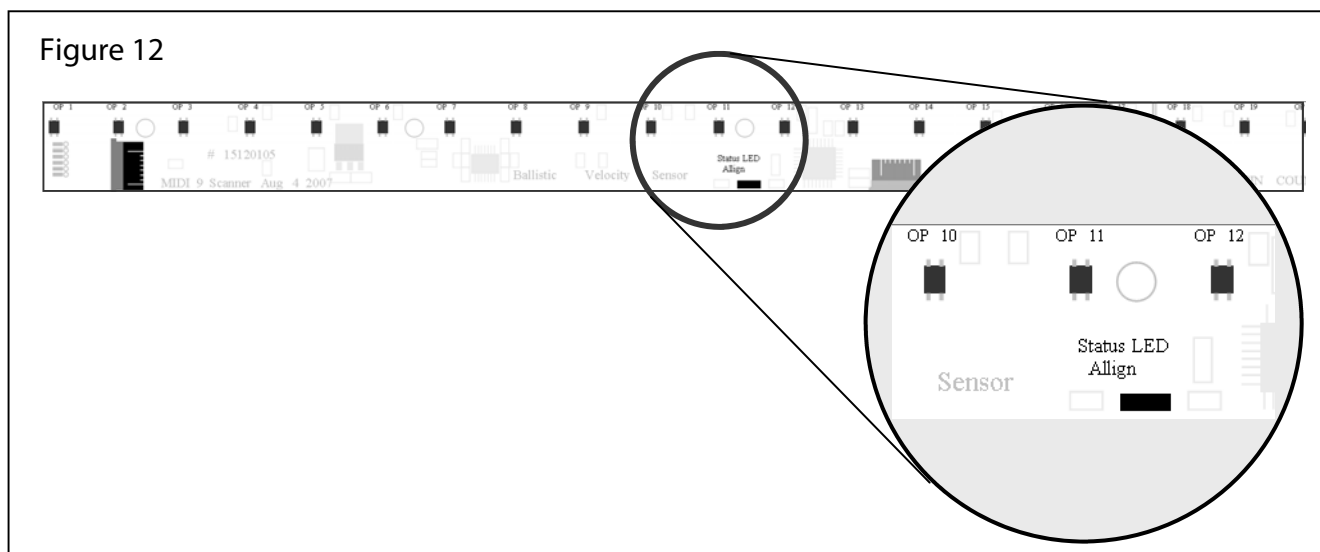

- These green LED "Status" lights, one on each board, indicate activity as MIDI data flows through the system. It also indicates the system's mode as follows:
Standard Version modes, see page 23 for version 45 modes when used with the QRS Sound Module.

QRS Mode - Light blinks once, then a pause.

- MIDI output is optimized for Pianomation acoustic record and playback.

MIDI Sound Module Mode - Light blinks twice, then a pause.

- MIDI output is optimized for playback through a sound module.
- *The output level of this mode is greater than that of the Record Mode.*

Mute Mode: Light flashes steadily.

- Stops MIDI output from PNOscan II.

- The LEDs also help to determine the proper left to right location of the Optical Sensors under each key. The placement of these "Status" LEDs is in a very specific location on the circuit board, and when they are positioned properly between certain keys, they will confirm that each Optical Sensor is positioned correctly under its respective key.
- It is not likely all of the sensors will align at the exact center of the keys. Therefore, alignment must be averaged across the groups of 22 notes. The "Status" LED must always end up within its corresponding key gap.


E]...Establishing the Bass/Treble Position of the Key Scan Circuit Boards - Function Test

- Starting with Key Scan Board #1, at the bass end of the keyboard, visually align the individual Optical Sensors with each key, keeping the "Status" LED aligned with the gap between keys 11 and 12. *Figure 13.*
- 8. Adjust **Board #1** to align the Optical Sensors while keeping the "Status" LED between **keys 11 & 12**.
- 9. Place a piece of Silver Tape over the track and board to secure it's position.
- Do not place the tape over any exposed "silver" trace or component on the board.
- 10. Repeat steps 8 & 9 for Key Scan boards 2, 3 & 4, aligning the "Status" LEDs as follows:
- 11. Adjust **Board #2** to align the Optical Sensors while keeping the "Status" LED between **keys 33 & 34**.
- 12. Adjust **Board #3** to align the Optical Sensors while keeping the "Status" LED between **keys 55 & 56**.
- 13. Adjust **Board #4** to align the Optical Sensors while keeping the "Status" LED between **keys 77 & 78**.
- 14. Use a fine tipped marker to place a mark on each of the metal tracks where the green LED is located.
- Once installed, the LEDs can be seen when looking down through the spaces between the keys.

Slide the boards within the track and align the sensors to the keys


keeping the "Status" LED between selected keys.

Mark the track at each "Status" LED

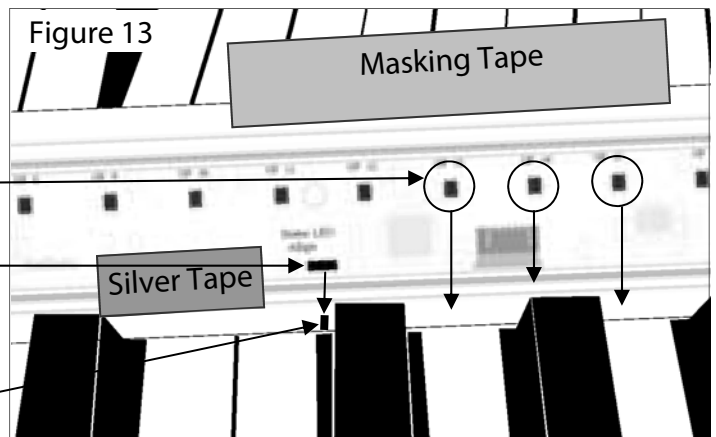

- 15. Place a small piece of masking tape over the "Status" LED on Key Scan Board #2.

- Press on the tape so that the outline of the LED is clearly visible.
- 16. Using a pencil, draw a line on the tape that is centered in the space between keys 33 & 34. *Figure 14.*
- We will use this mark later to align the bass to treble position of the Key Scan Assembly under the keys.

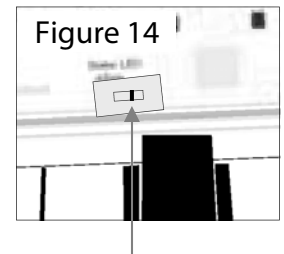

- With the function test complete, the key sensor strip now properly scaled to the key spacing and locked in place with tape, you are ready to continue the installation.
- 17. Unplug the AC Power Adapter from the wall outlet.
- 18. Disconnect the Key Scan Assembly by unplugging the cable from the Key Scan connector on the Soft Pedal Circuit Board.
- 19. Now remove any PNOscan items from the keyboard and set them aside while the keys are removed.
- Be careful with the Key Scan Assembly to avoid knocking the boards out of alignment.
- Always set the assembly in a safe place and lay it on a flat surface, do not set on end!
- 20. Use a straight edge and align it with the two marks you made on key 1 and key 88. Use a pencil and strike a light line across all 88 keys.

F] Locating and Securing the Proper Position of the Key Scan Assembly

1. Remove all of the keys from the key frame.

Note: Be certain to paint the keys before replacing them in the piano. See Figure 21 on page 16.

2. Place the Key Scan Assembly on the key frame as shown in *Figure 15*.

3. Obtain the Key Scan Track Mounts from the kit and position them under the track and directly on top of the vertical slats of the key frame.

4. Align the metal track into the recess of the plastic track mounts and attach the mounts "loosely" to the track using the 4-40 x 1/4 pan head screws. *See figure 16.*

- We will tighten the screws once the exact bass to treble position is determined.

5. Move the Key Scan Assembly, front to back, to align the row of Optical Sensors with the two marks made on the bass and treble ends of the key frame. *Figures 15 & 17.*

6. Use the provided 4x3/4" screws to fasten the mounts to the wood key frame.


- Later we will loosen these screws to add shims between the mounts and the key frame to set the proper Key Scan Assembly height and angle.

7. Place keys 33 & 34 on the key frame.

8. Slide the Key Scan Assembly, bass to treble within the track mounts, so that the mark on the tape (*Figure 14*) is centered in the space between keys 33 & 34. *Figure 17.*

9. Tighten the screws to secure the Key Scan Assembly to the Track Mounts.

10. Remove the masking tape from the "Status" LED between keys 33 & 34.

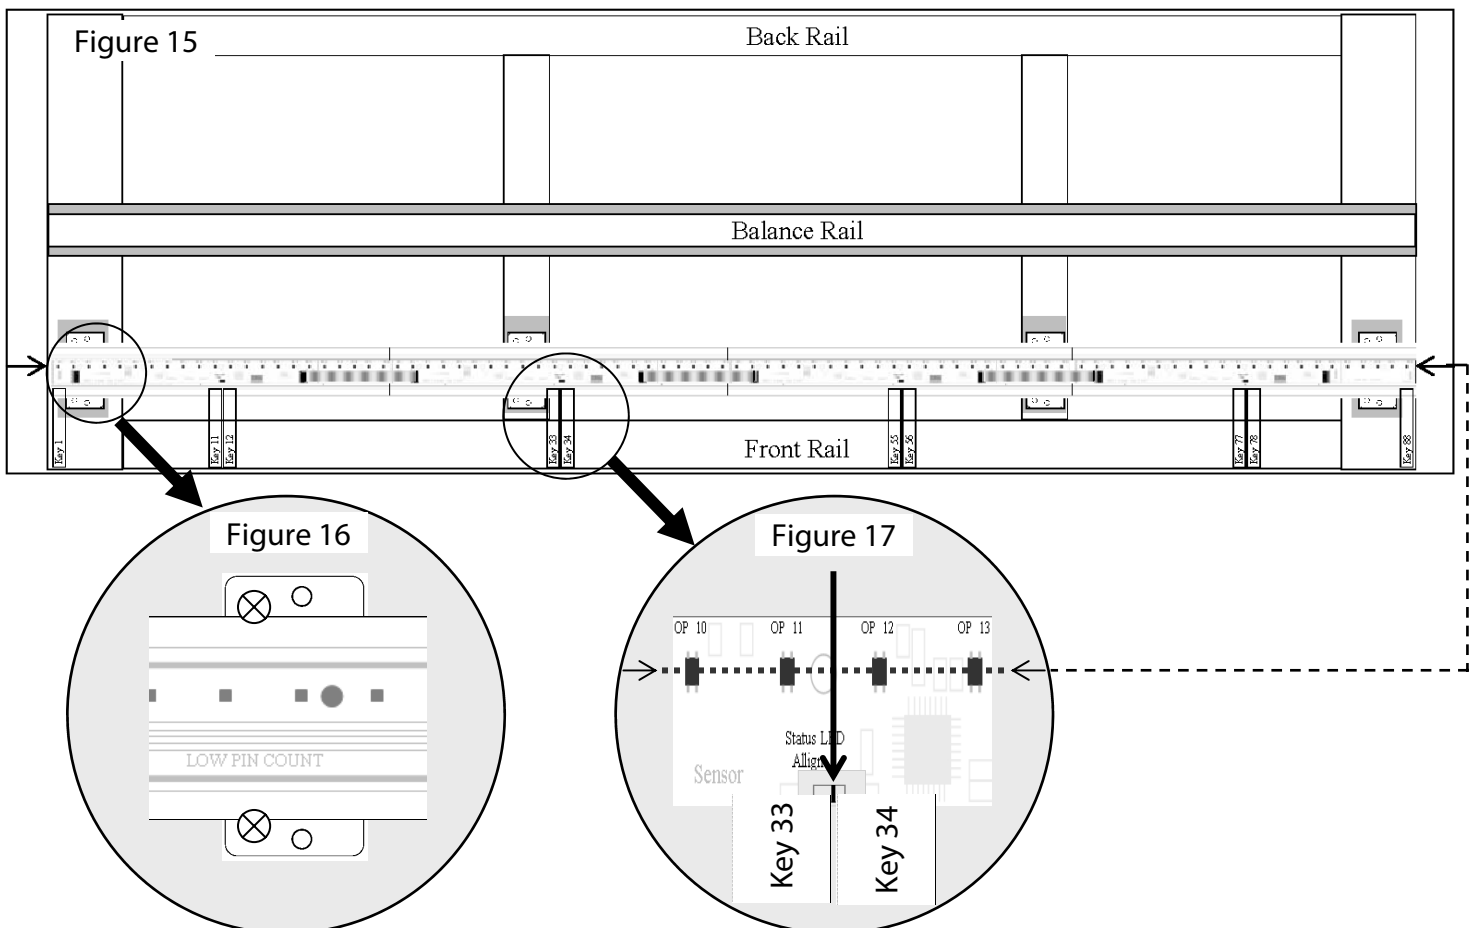

G] Setting the Proper Key Scan Assembly Height

Now that the proper Key Scan Assembly's front to back and bass to treble position is secured to the track, and with the track secured to the key frame, the proper height of the optical sensors can be set. It is very important for good performance that the distance between the sensors and the key bottoms is set correctly. Depending on the model of piano you will find that the sharp keys generally dip lower than the natural keys. For this reason we will use the sharp keys as our point of reference for our height adjustment.


Use the included shims to establish the correct height. More shims can be added under the rear of the mounts to adjust the angle of the sensors to match the key angle.

1. Place a few sharp keys across the keyboard. Don't place any above the mounting screw positions.
 2. Loosen the #4 x 3/4" mounting screws and add the necessary shims as you establish the required height measurements across the keyboard. *See Figure 18.*
 3. Add shims under the Track Mounts to set the gap from the Optical Sensors to the bottoms of the sharp keys at about **0.060"** [the thickness of two credit cards].
 4. Add extra shims, the smaller size, to tip up the rear of the Key Scan Assembly to conform to the slight angle of the keys.
- By fully dipping the sharp keys and measuring the gap between the sensor and sharp key bottoms you can establish the vertical setting of the Key Scan Assembly. Use feeler gauges or a known thickness of cardboard to measure the gap. The typical credit card is 0.030" or should be considered the smallest gap you would allow. Two stacked credit cards would create the ideal gap. The typical business card would create only one fourth of the minimum required gap.

⇒ **When pressing a key for measurement use just a medium force to ensure you are pushing into the felt dip washer.**

⇒ **Use care when establishing this vertical setting that the key cannot strike any part of the Key Scan Assembly. The most likely place where this can happen is at the connectors, located at three places on each of the Key Scan Boards. In many cases adding more shim to the back side of the scan rail mounts and less to the front during height setting, will help achieve a good gap distance while avoiding contact with the rail assembly.**


⇒ **In rare cases you may need to notch the bottom of the key in the connector areas to eliminate contact. This must be considered for allowance of action wear in which will cause the keys to dip deeper after break-in.**

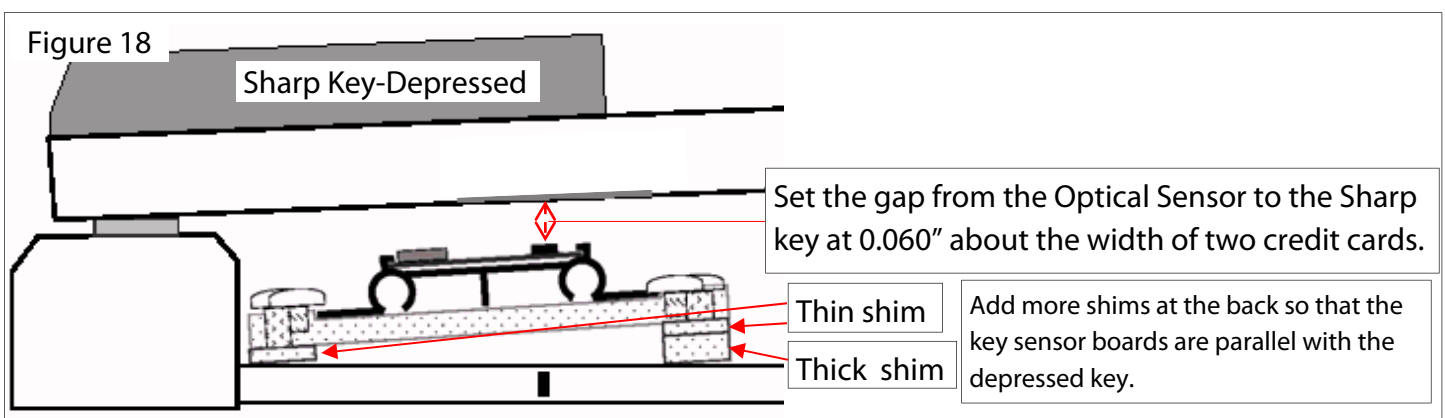


H] Dressing the Key Scan Assembly Cables

Once the height of the scan rail assembly is fixed you will need to dress the interconnecting cables.

- Check that the three wave cables used to connect the Key Scan Circuit Boards lay flat against the boards and don't touch any keys that are depressed. *See Figure 19.*
1. Use blunt nose tweezers to squeeze the cable to lay flat against the board. Squeeze in the middle of a wave will keep the cable straight. Once the cables are properly tightened and adjusted they should be laying flat against the circuit board. *See Figure 19.*
- If you have problems getting the cables to lay completely flat you can use a thin piece of tape or a single drop of super glue under one wave of the cable near the middle. As a last resort you can unplug the wave cables and stretch them to remove the waves. Reconnect and fold the cables so they lay flat against the boards. Tape or glue if necessary.
 - Tap on the key frame and listen for noise. from the wave cables against the boards and for the boards rattling within the metal tracks.

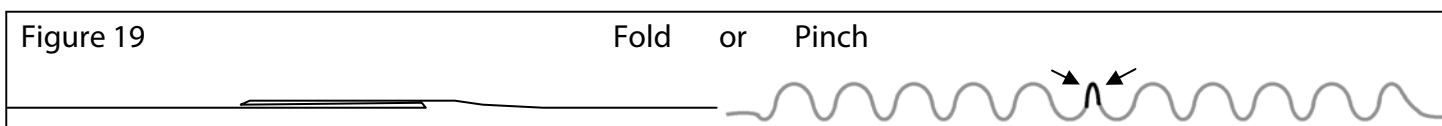


2. Prepare the 12" cable [20" for upright pianos] exiting the treble end of the Key Scan Assembly with an immediate 90 deg fold pointing forward and then wrapping down and around the front edge of the track. Continue routing under the track followed by an immediate 90 deg bend pointing right. Once the cable is positioned use a couple pieces of tape to hold in place. This orients the cable in the proper direction and keeps the cable clear of key's and sensors. *See Figure 20.*

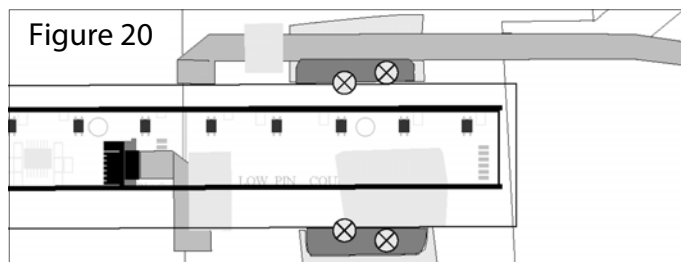

I] Preparing the Keys


1. For optimum performance, darken the sides of all keys to reduce light reflections. Centered on the line you scribed on the keys, create a 1" long x 1/2" high fill using a extra large permanent marker or paint pen. We suggest a jumbo size magic marker. Use care not to get paint on the bottom of the keys and not to color too high up the key as to make it viable when adjacent keys are depressed. *Figure 21.* Be sure to remove and color the sides of the keys originally left on the key frame.
2. With the key sensor rail adjusted and secured place the piano keys back onto the key frame.
3. With all keys darkened and reinstalled onto the frame, the action stack can be placed back on the key frame. Place the key/action assembly back into the piano case.

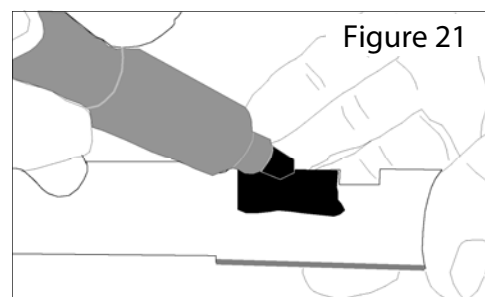

J] Soft Pedal Circuit Board Installation

This circuit board has two functions. It actually contains the sensors that read the soft shift movement of the action and provides a single point for all cable connections.

1. Mount the Soft Pedal Circuit Board to the plastic Soft Pedal Chassis using the 4-24 x 3/16" screw.
See Figure 22.

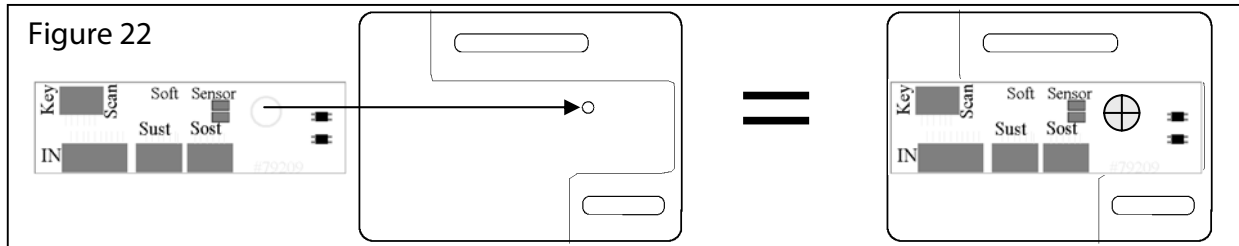


This is a good time to connect all cables to the soft pedal board. Making these connections prior to mounting the soft pedal board makes cable connection easier.

2. From Figure 20, connect the 12" 6-pin cable [20" for Upright pianos] to the Key Scan port.
3. Connect a 20" 6-pin cable [60" for Upright pianos] to the Sust (Sustain) port.
4. Connect the 38" 10-pin (wide) cable to the IN port.


The working distance for the sensors on the Soft Pedal Circuit Board is about 1/2". In most cases you can find a place on the side wall of the piano where the movement of the main action frame can be captured. A grand key/action generally moves about 1/4" or less.

5. Put the action back into the piano.
 6. Locate a place to mount the Soft Pedal Chassis where it will face a flat area of the action frame.
See Figure 23A for Grand pianos and Figure 23B for Uprights.
 - Check that the return spring does not rub the Soft Pedal Chassis when the action is shifted.
 - You may need to add a block of wood to space the sensor out to achieve a distance of 1/2" to 5/8" with the action in it's rest position.
- ⇒ **The 10-pin (wide) cable from the "IN" port of the Soft Pedal Circuit Board MUST reach to the TUSB box. There are NO extensions or longer 10-pin cables available.**
- ⇒ **Choose a location for the Soft Pedal Board so that the cables will reach to the TUSB Interface and the Sustain Pedal Board. See sections K & L on the following pages.**
7. Once you have selected a location based on the said parameters, remove the action from the piano and proceed to install the soft pedal assembly.

Grand Piano Installation

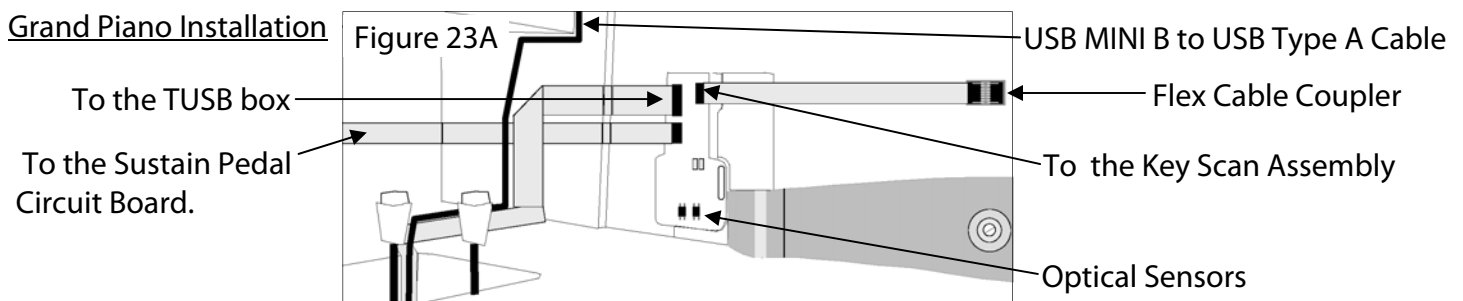

Upright Piano Installation

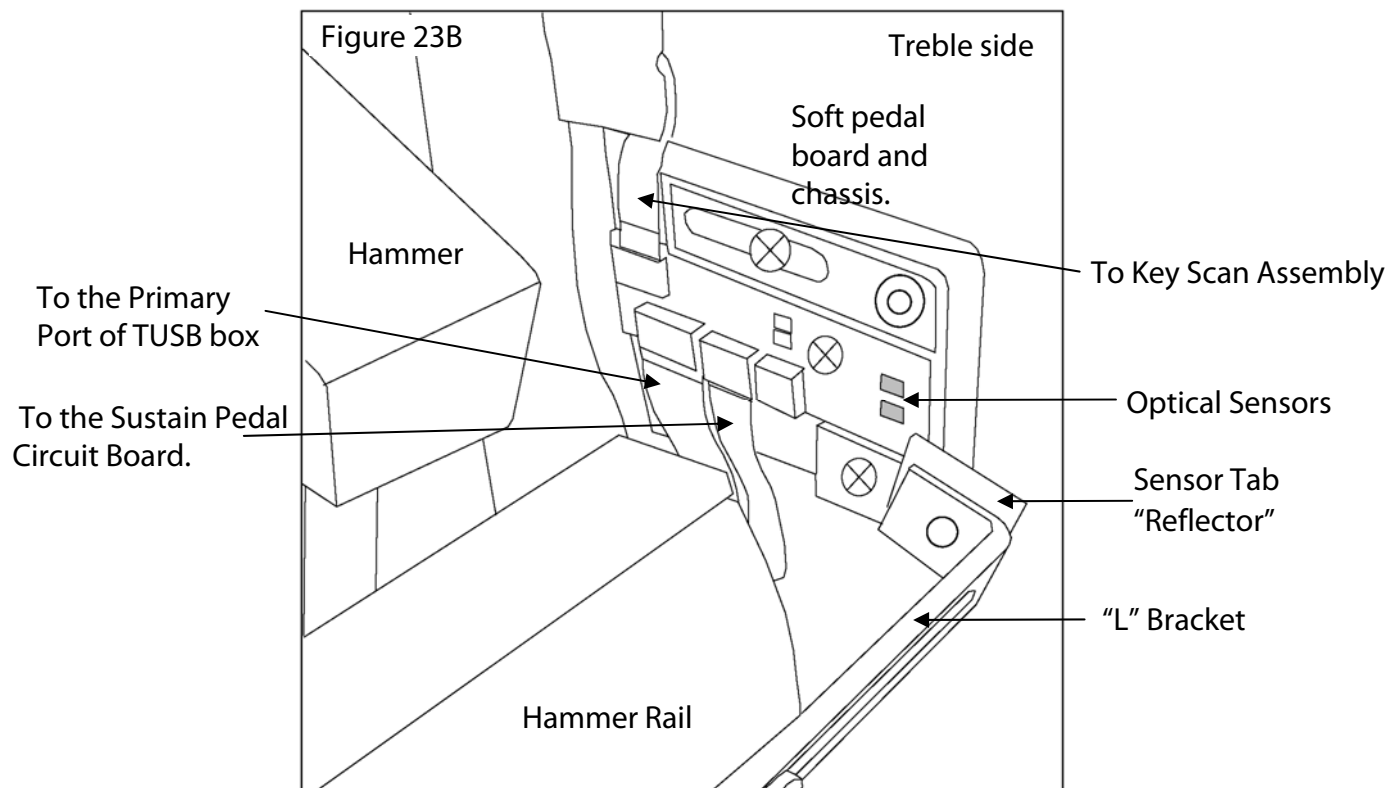

K] Mounting the TUSB Interface See figures 26A [Grand] or 26B [Upright]

Place the TUSB user interface "buttons and lights" where they are easy to access and can be seen. If the TUSB is located with ease of access in mind this generally means you will mount it under the keybed and held back from the edge an inch or so. When using this method a 3/4" hole will need drilled down through the bed. The hole should be near the soft pedal board and positioned so there is no interference between the hole, key block, piano leg or key frame. If the piano has a Pianomation player system installed you can most likely use the solenoid slot for cable routing as seen in *Figure 23*.


1. Mount the TUSB interface at the desired location using 2 6x1/2" pan head screws.
2. Route the 30" 10-pin flex cable into the Primary Port of the TUSB box.
3. As you run the 30" 10 pin cable through the keybed, run the USB MINI B to USB Type A cable as shown on *Figure 23A* and connect to the USB port of the TUSB box.
4. Run the other end of the USB cable up the treble rim and securely mount it somewhere behind the music shelf. For Upright installations, run the USB MINI B extension cable to the treble side of the piano as shown in *Figure 26B*.
5. Use the plastic wave clamps to secure the cable along it's routing.
6. Connect the USB cable.
7. Locate the 5 volt AC wall adaptor and route the cable to the TUSB box. Select a location where the AC pack can be connected to a 120 volt power source. Typically a AC power outlet strip will be mounted on the under side of the piano for powering accessories.

⇒ **PNOscan II installations that will only be connected to a PC via the USB port will NOT need the 5 Volt AC wall adapter.**

L] Sustain Pedal Circuit Board Installation


Assemble the sustain sensor circuit board onto the plastic chassis.

1. Start by weaving the 20" cable [12" for Upright installations] through the 3 strain relief slots in the sustain chassis as shown in *Figure 24 A*. [Upright - Use Flex Cable Coupler to connect 12" to 60" cable]
2. Once the cable is threaded through the slots, push the slack out and secure the sensor board with a #4x1/4" screw. *Figure 24 B & C*.

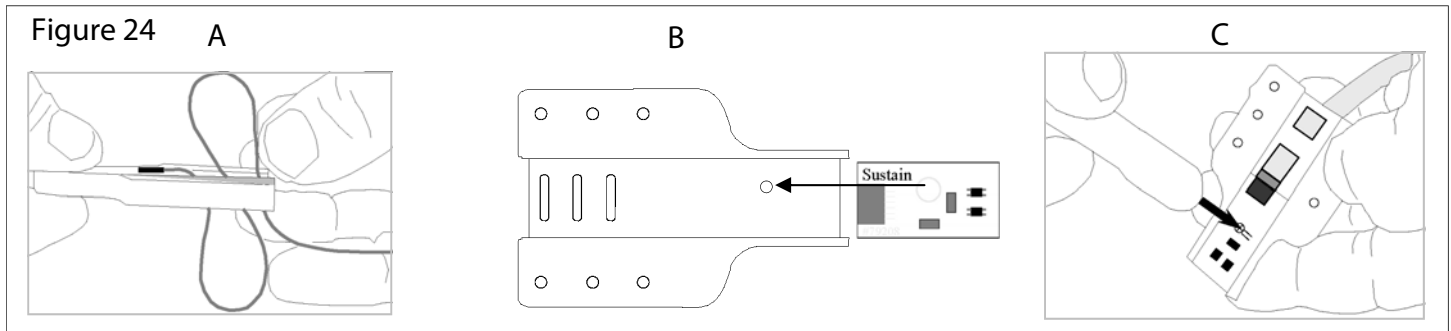

Mount the Sustain Pedal Assembly to the piano. Refer to *Figure 25A [Grand]* or *25B [Upright]*.

3. Attach the "L" mounting bracket to the sustain chassis using a 4-24 x 3/16" screw. This bracket can be oriented onto the chassis at various angles as needed.
4. Apply the self adhesive Sensor Tab onto the damper tray to create a flexible overhang for the sustain sensor to read.
5. Mount the sustain sensor by screwing the "L" bracket to the belly rail or bottom board. Attach the assembly to the bracket using a #6 x 1/2" screw.

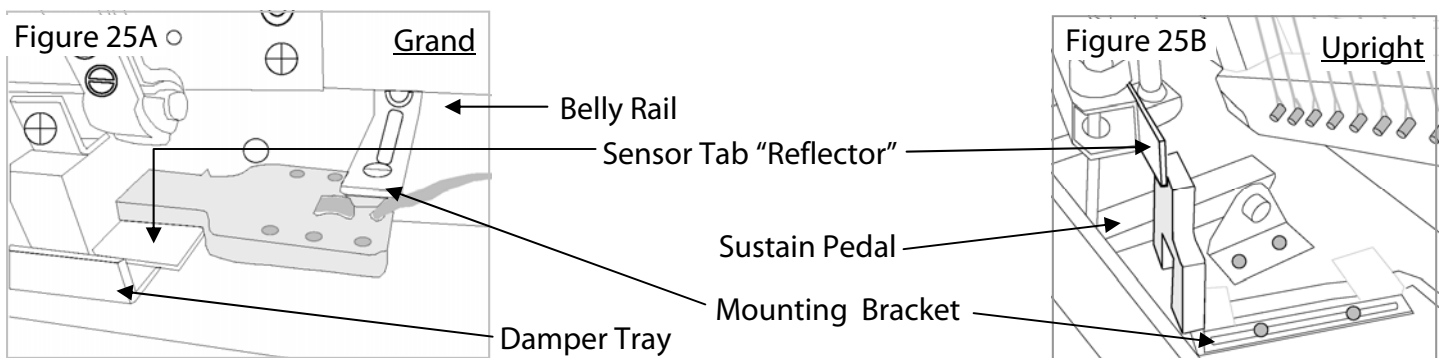

Setting the gap between the Sustain Pedal Assembly and the damper tray.

- The sustain sensor works by sensing the proximity of the tab as it moves toward the sensor.
6. Adjust the height of the sensor assembly, by bending the "L" bracket, so that when the damper tray is in the full up position, the tab is about 1/16" away from the sensor.
- Typically the gap between sensor and tab is about 1/2" when the damper tray is at rest. The flexibility of the rubber tab prevents damage or misalignment of the sensor should the tray travel further than predicted and actually contacts the sensor. This could happen should someone adjust the sustain pedal mechanism after the installation is completed. The sustain sensor should continue to work under these circumstances. It is strongly recommended that the rubber tab is used for this reason.



M] Final Assembly

At this point in the installation...

- Refer to *Figure 26A [Grand]* or *Figure 26B [Upright]*.
 - The Key Scan Assembly should be installed under the keys, mechanically aligned both left/right and front/back and set to the proper height.
 - The sides of the keys should be darkened.
 - The Soft Pedal Assembly should be installed and at the proper distance from the key frame.
 - The Soft Pedal Board's "IN" connector should be connected to the TUSB Interface's "Primary Port".
 - The Sustain Pedal Assembly should be in place and adjusted.
 - The Sustain Pedal Assembly should be connected to the Soft Pedal Assembly's "Sust" connector.
 - There should be one 12" cable [20" on Upright pianos] connected to the Key Scan port of the Soft Pedal Assembly but, the opposite end not yet connected.
1. Route the 12" cable [20" for Uprights] from the Key Scan connector of the Soft Pedal Assembly along the inside wall of the piano case extending it toward the front of the piano.
 2. Grand - Use a couple of wave clamps to secure the cable. One clamp should be located close to back end of the key block. This will provide a holding place for the cable coupler.
 3. Attach the Flex Cable Coupler to the open end of this cable. [Upright installations will not need the coupler at this cable. Run the 20" cable from the key Scan connector to the Soft Pedal Assembly].
 - A cable coupler allows easy disconnect of the Key Scan Assembly when the action get's serviced and also provides damage protection in the event someone inadvertently pulls the piano action from the piano without disconnecting the cable. The cable will automatically disconnect.
 4. Proceed to place the action assembly back into the piano. Grab the cable coupler and connect the two 12" cables together.
 5. Connect the TUSB Interface to power via either the 5 Volt adapter or to a Computer via the USB port.
 - 5. Perform the Keyboard and Pedal Setup procedures on page 21 to complete the PNOscan II installation.**
 6. Reassemble the piano.



Keyboard Setup: To make the setup process easier, connect the MIDI Output of PNOscan II to a soundcard equipped QRS Pianomation controller or to a MIDI sound module. As you depress each piano key during setup you will need to hold the key down until the system accepts the key's down position. To indicate the position has been accepted, the PNOscan II system outputs a midi note. Alternately if you don't have a MIDI device connected, you can reference the green light on the Function button. Each time a key position is accepted this button will light.

1. Press and hold the "Key Adj" button.
2. While holding the "**Key Adj**" button, press and hold the "**Function**" button.
3. Hold both buttons in until the 'Key Adj' light flashes, release both buttons, wait for rapid flash to stop.
 - The system is now in keyboard adjust mode and all previous key calibration values in memory have been erased.
4. Once in the setup mode, start with key # 1, pressing the key firmly through its entire travel. Hold the key down until you either hear the note play through the speaker or until the Function button lights momentarily.
⇒ **It is very important that you hold the key down until it is accepted as a position. This is normally instantaneous but sometimes takes a couple of seconds.**
5. Repeat this process for each key until all 88 notes have been accepted.
 - After this process no further action is required from the user and the keyboard setup is complete.

Pedal Setup: Use the following sequence to setup the pedals. Note that the standard configuration includes a soft pedal and a sustain pedal. The Sostenuto sensor is optional. If used, this pedal adjusts in the same way.

1. Press and hold the "Pedal Adj" button.
2. While holding the "**Pedal Adj**" button, press and hold the "**Function**" button.
3. Hold both buttons until the "Pedal Adj" button starts flashing, then release both buttons.
 - The system is now in pedal setup mode and all previous pedal values in memory have been erased.
4. Firmly press the sustain pedal fully down and hold. Watch the "Function" button for a quick green flash and then release the pedal.
5. Firmly press the soft pedal fully down and hold. Watch for a quick green flash then release the pedal.
⇒ **Be sure you see the quick flash for both pedals. If you do not see this flash exit setup by pressing the Pedal Adjust button and then reenter pedal setup mode and start again.**
6. Return to the sustain pedal and slowly start pressing the pedal down. As the pedal moves down you will see the Function button start to flash. **Hold this pedal position.**
 - This indicates you are in the range of a acceptable trigger point. At any point in the pedals position, while the green light is flashing, pressing the "Pedal Adj" button will set that pedal position as the point where midi sustain event will occur. Typically this point should be at the same exact point where the actual dampers start to lift.
7. Press "**Pedal Adj**" one more time to save the settings and exit adjust mode.
8. Release the pedal, the setup procedure is complete.

Figure 26A Grand

See page 26 for connection diagrams



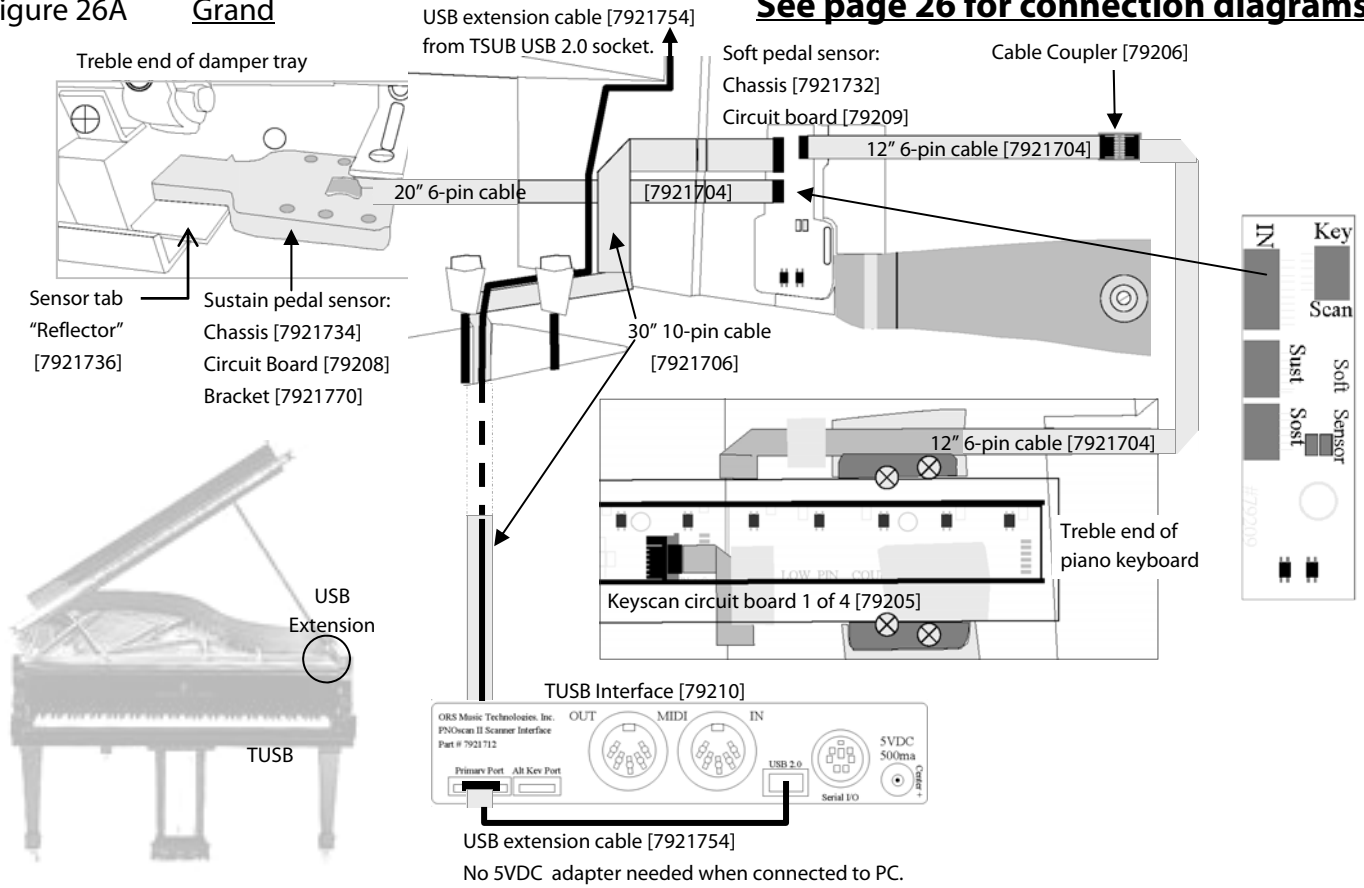


Figure 26B Upright

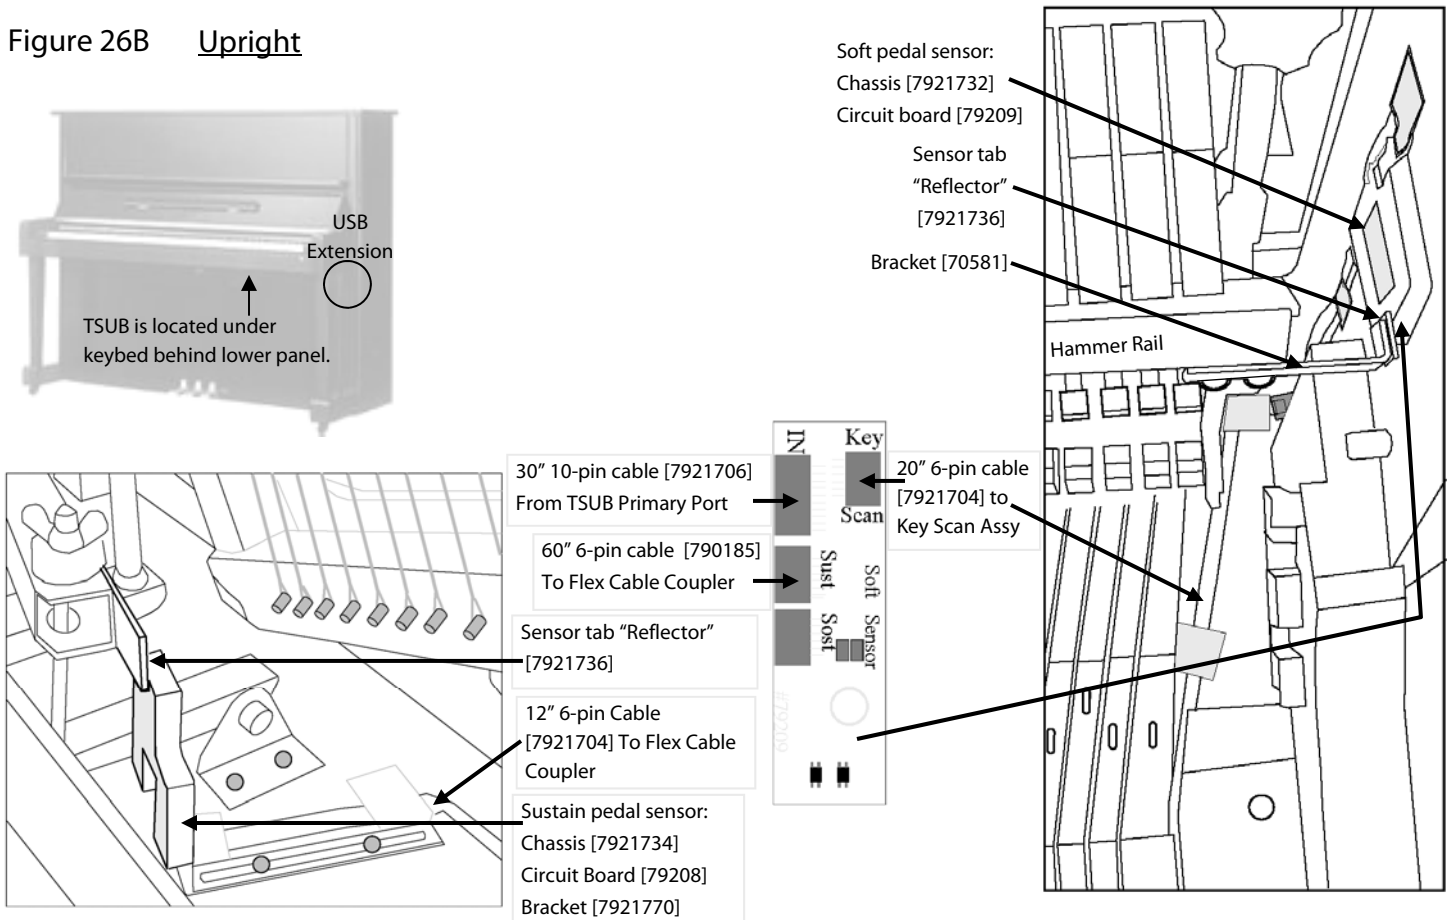

Operating Modes

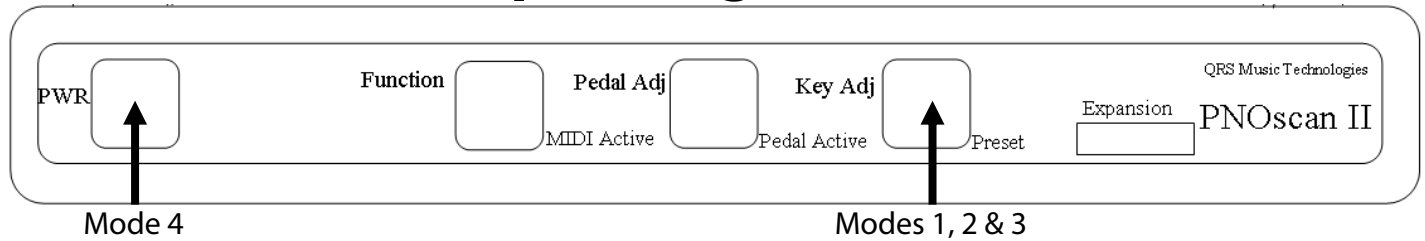

Standard Version

Repeatedly tap the Key Adj button to select one of the following modes:

1. **QRS Mode** - Light blinks once, then a pause.
 - MIDI output is optimized for Pianomation acoustic record and playback.
2. **MIDI Sound Module Mode** - Light blinks twice, then a pause.
 - MIDI output is optimized for playback through a sound module.
 - *The output level of this mode is greater than that of the Record Mode.*
3. **Mute Mode:** Light flashes steadily.
 - Stops MIDI output from PNOscan II.

Version 45 - Used with QRS Sound Module

Repeatedly tap the Key Adj button to select one of the following modes:


1. **QRS Mode - Sound 1** - Light blinks once, then a pause.
 - MIDI output is optimized for Pianomation acoustic record and playback.
 - PNOvoice sends Acoustic Grand Piano sound.
2. **MIDI Sound Module Mode - Sound 2** - Light blinks twice, then a pause.
 - MIDI output is optimized for playback through a sound module.
 - *The output level of this mode is greater than that of the Record Mode.*
 - *PNOvoice sends Electric Piano sound.*
3. **MIDI Sound Module Mode - Sound 3** - Light blinks three times, then a pause.
 - MIDI output is optimized for playback through a sound module.
 - *PNOvoice sends Church Organ sound.*
3. **MIDI Sound Module Mode - Sound 4** - Light blinks four times, then a pause.
 - MIDI output is optimized for playback through a sound module.
 - *PNOvoice sends String Ensemble sound.*

Tapping the Power button places the unit in System Mute mode: **Both versions.**

4. **System Mute:** The Key Adj light flashes steadily.
 - Stops MIDI output from PNOscan II and also sends an "All Notes Off" command.

Tap the Key Adj button to exit the Mute mode.

TUSB Interface Front Panel

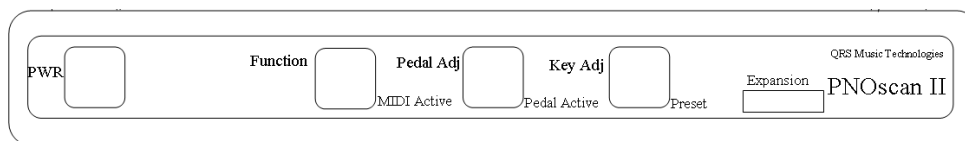

A Power

- Press and hold for about 2.5 seconds to power the system off.
- Pressing when the system is off, powers the system on.
- Pressing this button for less than 2 seconds places the system in mute mode and sends a "all notes off" command to the MIDI Out and USB ports.

This button also has multi function lights:

- **Orange** indicates that power is being received from the AC wall adaptor or from the USB port.
When both power sources are present the USB port will always be the primary source for system power unless the host PC cannot deliver the needed current. In this case the AC adaptor will take over.
- **Green-Flicker** indicates that the USB host has recognized PNOscan II.
- **Green** indicates that the USB host application is launched and is ready for use.

B Function

Used in conjunction with other buttons to access the setup functions.

- **Green** flicker indicates that MIDI data is being outputted.

C Pedal Adjust

Used to access the pedal setup mode.

- **Green** light indicates that pedal motion is detected.

D Keyboard Adjust

Used to access keyboard setup mode.

- **Green** light indicates the active mode of system.
- There are three modes; QRS, Mute and MIDI Sound Module


E Expansion

Normally not connected. Future uses include connection to control surface and other integration.

B Alternately Flashing **D**

Alternately flashing Function and Key Adj lights indicate that a ribbon cable is disconnected or plugged in upside-down at either the TUSB interface or the cable coupler. At the TUSB, the silver-contact side is toward the bottom of the TUSB box. At the cable coupler, the silver-contact side of the cables should face the circuit board.

TUSB Interface Rear Panel Connections

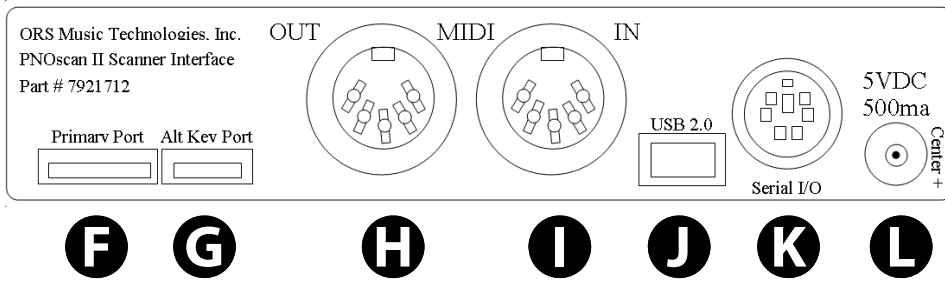

On Version 45 TUSB units, modified for use with the QRS Sound Module, DO NOT CONNECT ANYTHING to the 5VDC socket. Power to the TUSB is supplied from the module via the Serial I/O.

F Primary Port

Connection to the soft pedal board is made here. This accepts the 10-Pin Flex Cable.

G Alt Key Port

This port accepts a 6-Pin Flex Cable from the Key Scan Assembly. This port is normally not connected, although it can be used along with the Primary Port if desired. When only the Primary Port is used then the Key Scan Assembly gets connected to the Soft Pedal Board.

H MIDI OUT

Standard MIDI output connection. Connects PNOscan II to sound modules, QRS Pianomation or other MIDI device.

I MIDI IN

Standard MIDI input connection. Normally not connected. Used in more complex setups when communication to diagnostic programs such as the MIDI9 alignment program is needed.

J USB

Connect a host computer to this port for convenient use of the PNOscan II system and computer software. USB 2.0 compliant

K Serial I/O

Used with PNOscan Version 45, modified for use with the QRS sound Module.

The QRS Sound Module provides power to the TUSB via this port. See the PNOscan V45 User Guide.


L 5 Volt Input

Connect the AC wall power adapter here. Use only the supplied adapter. 5VDC 1.0A Center +


With V45 TUSB units, modified for the QRS Sound Module, DO NOT CONNECT TO ANY ADAPTER!

The TUSB unit receives its power from the QRS Sound Module via the Serial I/O port.

Connection Diagram- Grand Piano

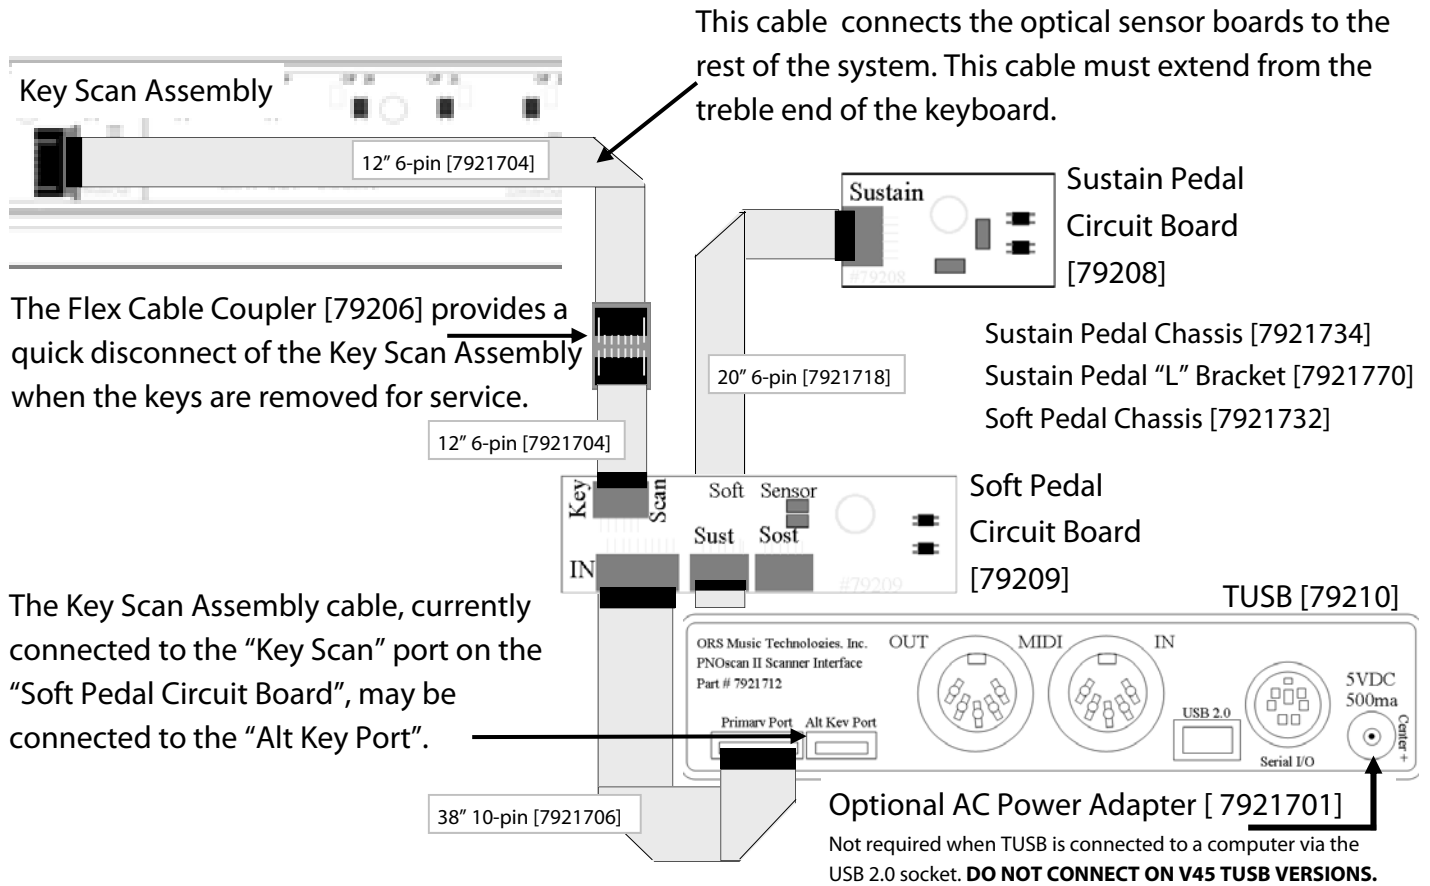

Connection Diagram- Upright Piano

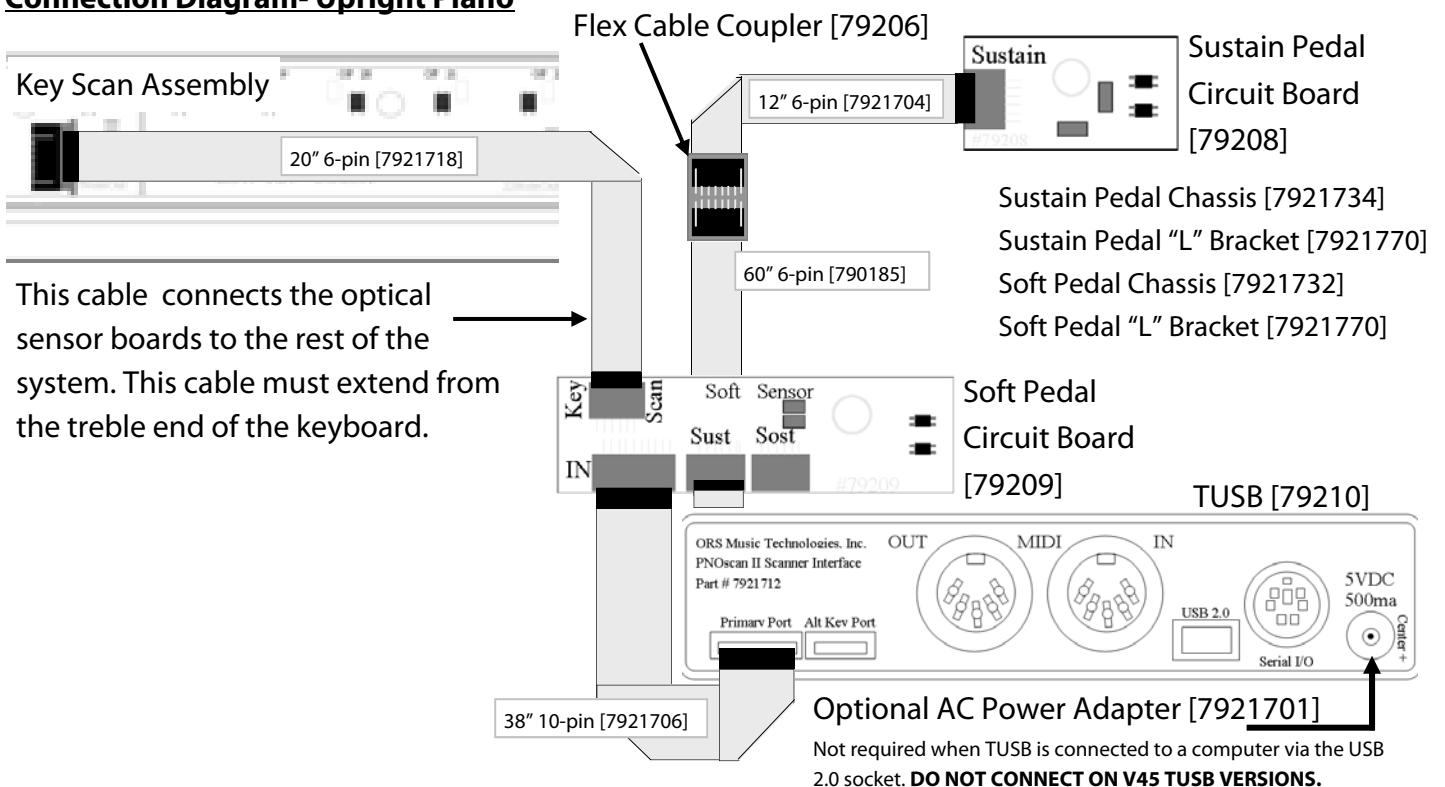



Troubleshooting

No MIDI Output from TUSB Interface

The Function and Key Adj lights are alternately flashing.

Alternately flashing Function and Key Adj lights indicate that a ribbon cable is disconnected or plugged in upside-down at either the TUSB interface or the cable coupler. At the TUSB, the silver-contact side is toward the bottom of the TUSB box. At the cable coupler, the silver-contact side of the cables should face the circuit board.

The Key Adj light is flashes steadily.

The system is in Mute Mode

The PWR light is red

Indicates a USB failure - Call your dealer or QRS Technical Support

PNOSCAN II™ LIMITED WARRANTY

PNOScan II Electronics Limited Warranty

QRS Music Technologies, Inc. ("QRS") warrants to you for the Warranty Period that there are no defects in the materials of this Product (as identified at the end of this warranty certificate). The "Warranty Period" expires (except as explained below) Two (2) years from the date of your purchase of the Product. In order to determine the date of your purchase of the Product, you will need to provide to us a credit card receipt, a purchase agreement, a sales slip, a warranty registration or some other form of proof that you are the original purchaser and the date of your purchase of the Product.

If you are not able to provide us with some form of proof of purchase date, the Warranty Period will be a shorter period (the "Shorter Warranty Period") which is two years from the date that your dealer purchased the Product from QRS. If you cannot provide a proof of purchase date, you may contact us in the manner described below and we will assist you in determining the date that your dealer purchased the Product from us and determining the Shorter Warranty Period. This is a warranty is for parts only and does not include shipping or labor.

This warranty does not apply to any accessories you may have purchased with the Product and does not apply to any piano or components of the piano with which the Product is used or any Piano in which the Product is installed. In addition, this warranty does not cover scratches, dents or other defects in the cosmetic finish of the Product.

The warranty is issued solely to the original purchaser of the Product. THIS WARRANTY IS NOT TRANSFERABLE. If, during the Warranty Period, parts incorporated in this Product are found to be defective in material or workmanship, and the original purchaser provides Purchase Documents to QRS, then QRS or its authorized dealer will provide replacement parts without charge. We may, at our discretion, provide reconditioned parts or assemblies as warranty replacements. You as the original purchaser will be responsible to pay labor costs incurred in connection with any repair.

LIMITATION IN CONNECTION WITH OBSOLETE PRODUCTS

If at the time you make a claim pursuant to this warranty, we no longer manufacture or sell the same model of Product, we may, at our discretion, rather than repair or replace defective parts in the Product, offer to sell you a more current version of a similar Product. If we offer to sell you a more current model of the Product, you will be responsible to pay the difference between the Manufacturer's Suggested Retail Price ("MSRP") of the more current version of a similar Product and the price you paid for the Product you purchased. If you choose not to accept such offer, we will have no further obligations pursuant to this warranty.

THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESS OR IMPLIED, MADE BY THE MANUFACTURER IN CONNECTION WITH THIS PRODUCT. INCLUDING, BUT NOT LIMITED TO, WARRANTIES OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ALLOWED BY THE LAW, QRS SHALL NOT BE RESPONSIBLE FOR LOSS OF THE PRODUCT, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, SPECIAL OR CONSEQUENTIAL DAMAGES, EVEN IF THE MANUFACTURER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

This warranty gives you specific legal rights. Some states provide other rights, and some states do not allow excluding or limiting liability for incidental or consequential damage. Consequently, the limitations and exclusions in this warranty may not apply to you. In addition, some jurisdictions have consumer protection rules, regulations and statutes that may apply to you.

Exclusions

There is no express warranty on the Product and this warranty is void if:

- 1) You did not purchase this Product from an authorized Pianomation reseller
- 2) This Product has been serviced, modified or tampered with by anyone other than an QRS Authorized Service Representative
- 3) The name, trademark or serial number has been modified, defaced or removed from the product,
- 4) This Product has been damaged as a result of abuse, abnormal force or strain, failure to reasonably maintain and protect, modification, accident or exposure to extreme temperature or humidity,
- 5) Parts, supplies or other accessories which have not been approved by QRS have been used with this Product,
- 6) Radio frequency interference is generated by uncertified and/or illegal equipment,
- 7) This Product has been moved or delivered without reasonable preparation and packaging or
- 8) QRS reasonably determines, after inspection that there has been modification of this Product which adversely affects the reliability of the product or component.

Owner's Responsibility

In order to have rights under this warranty, you have the following responsibilities:

- 1) Retain your proof of purchase and purchase date and send in your Warranty Registration Card
- 2) Notify QRS or any authorized dealer of any warranty claim within ten (10) days after discovery and provide a detailed explanation of the problem.

General

If any provision herein shall be unlawful, void or for any reason unenforceable, then that provision shall be deemed severable from this warranty certificate and shall not affect the validity of and enforceability of the remaining provisions.

QRS reserves the right to make changes in design and/or improvements to its products without any obligation to retrofit products previously manufactured.

INSTRUCTIONS FOR OBTAINING WARRANTY SERVICE

- 1) If you cannot provide proof of purchase, contact QRS at 800-247-6557 and we will attempt to determine the date on which your dealer purchased the Product and assist you in determining the Shorter Warranty Period. For warranty service, contact the dealer from whom you purchased the product, or your nearest dealer.
- 2) If no dealer is near you, contact QRS by phone at 800-247-6557.
- 3) Do not ship the product without prior written Return Authorization from QRS. Do not attempt to repair or disassemble the product yourself.
- 4) Please record your model number and serial number and your date of purchase below for your records. Keep this information with your proof of purchase in case your product requires service. Do not dispose of the warranty after it expires. In the event your product ever requires service, these instructions should be helpful in enabling you to obtain proper service.

Product Model # _____

Product Serial # _____

Date of purchase _____

QRS Music Technologies, Inc.

2011 Seward Ave.

Naples, FL 34109

239-597-5888

239-597-3936 Fax

Copyright © 2006 QRS Music Technologies, Inc.

All rights reserved